


Programming combination

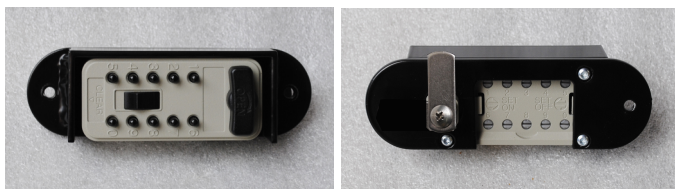

WITH THE LOCK IN THE HOME POSITION, SELECT NUMBER AND TURN ARROW TOWARDS **SET ON** DIRECTION TO SET NUMBER, REVERSE STEP TO DISENGAGE

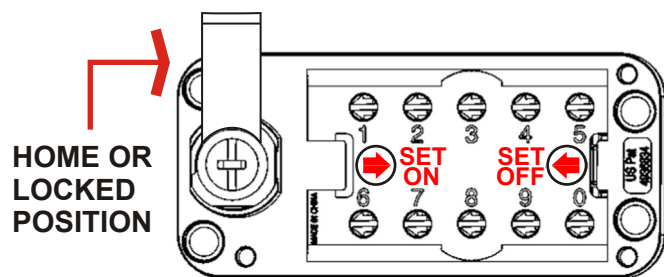


FIGURE 1

Lock Installation

- The lock is preassembled in the bin, if you are programming the combination, Remove the lock housing by unscrewing the 2 nuts and pull out the 2 bolts. No need to remove the lock from the housing to access the set buttons.
- Carefully read the manufacturer's instructions below and familiarize yourself with the how the lock works.
- Align and insert the two tamper proof bolts and affix the nut.

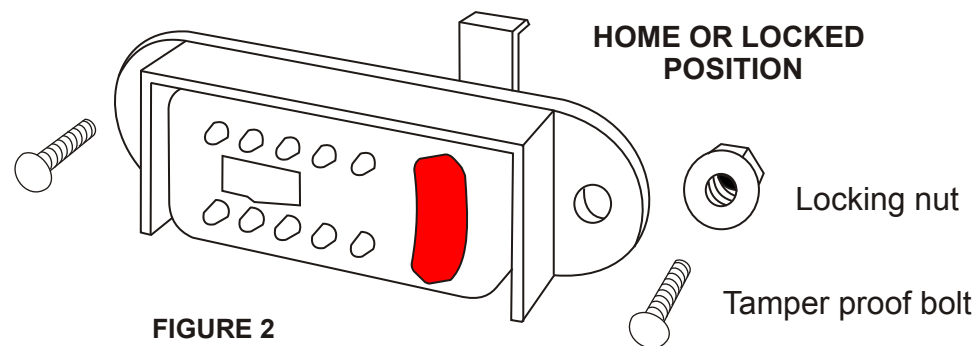


FIGURE 2

Manufacturer's instructions

Kidde TouchPoint™ Pushbutton Lock Instructions

I. Selecting Your Combination

Please look at the front of the TouchPoint Lock. There are buttons numbered 1 through 0. There is also an OPEN lever and a CLEAR button.

There is no preset combination on your TouchPoint Lock. Select your own combination and keep the combination in a safe place.

For best results, select between four and seven numbers in your combination. Each number can only be used one time. Do not use number combinations that can be easily guessed.

II. Setting Your Combination


WARNING

Improperly setting the combination is not covered under the warranty.

1 ○	○ 6
2 ○	○ 7
3 ○	○ 8
4 ○	○ 9
5 ○	○ 0

Do not disassemble the lock. Doing so voids the warranty.

- 1) Press down on CLEAR. Then turn the OPEN lever to open the cabinet or enclosure.
- 2) Remove the plastic card from the back of the lock by lifting from the center of the edges.
- 3) You will see ten numbered buttons with arrows. These numbers correspond to the numbered buttons on the front of the lock.
- 4) All the arrows on the screws point up because there is no preset combination.

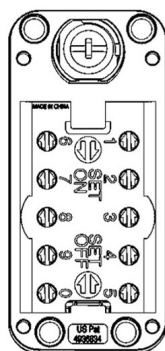

Arrows pointing up are not part of your combination.

Arrows rotated a half turn down are part of your combination.



IMPORTANT: Open knob must be in LOCKED position before the code can be changed.



- 5) Use the screwdriver tip on the plastic card or a small screwdriver to rotate the arrows. For each number in your combination, apply light pressure and rotate a half turn so that the arrow points down and snaps up.
- 6) Check to make sure that the arrow of any number that is not in the combination is pointing UP.

CAUTION

Arrows must point either up or down. An arrow pointing up is not a number in the combination. An arrow pointing down is a number in the combination.

If any arrow is pointing left, right or has not snapped up, the combination will not work. Test the combination before locking the cabinet or enclosure.

- 7) Replace the plastic card on the back of the lock.

III. Testing Your Combination

Please note: This product is equipped with a clutch mechanism to protect it from forced entry. Do not be alarmed if the OPEN lever turns even if the correct combination has not been entered.

Test before locking the TouchPoint Lock.

- 1) Make sure OPEN lever is in home position. If not, turn OPEN lever counter-clockwise until it's in the home position. On the front of the lock, push only the numbered buttons in your combination. If a mistake is made, pull down on the CLEAR button and re-enter the combination.
- 2) Turn the OPEN lever clockwise to open. If the combination is set correctly, the OPEN lever and cam will turn fully at



HOME OR LOCKED POSITION

Locking nut

Tamper proof bolt

the same time. If not, pull down on the CLEAR button and refer to section II - Setting Your Combination.

IV. Opening and Using Your TouchPoint Lock

Once your combination has been set:

- 1) Push in the buttons that correspond to the combination you have set. Buttons may be pushed in any order.
- 2) Turn the lever clockwise to unlock the TouchPoint Lock. If you have entered an incorrect combination, you can return the buttons to their original setting by sliding down the CLEAR button.
- 3) When you turn the lever, the combination will clear.
- 4) To relock the TouchPoint Lock, close the cabinet or enclosure and turn the OPEN lever counter-clockwise. When you release the lever, the cabinet or enclosure will be locked.

1-YEAR LIMITED WARRANTY